

Before calling service:

| Problem | Cause |
|--|---|
| The machine is too noisy | There is a fallen object in the machine. |
| | There is a fallen object in the area of the fan. |
| The machine does not work: | The power cable is not connected. |
| | Socket does not work. |
| | The main switch is not turned on or the thermostat is set to „0“. |
| The machine is turned on, but does not cool: | Ventilation holes are covered. |
| | The machine has a dirty condenser. |
| Fittings do not seal properly | The tube is not inserted correctly. |
| | damage to the tube |

If, after the above recommended checks the fault still persists, please contact customer service.

Do not forget to specify the following:

- 1 type of defect
- 1 type of product
- 1 product serial number (listed on the label)

Ordering parts:

ALWAYS USE ORIGINAL PARTS.

The manufacturer or supplier(Tap Your Keg LLC) does not take any responsibility for parts which are not original or recommended by the manufacturer.

Technical specifications:

The technical label is located on the external front side (under the control panel) of the machine or on the inside divider. The CWP -100 have the label on the outside shell on the front of the machine.

| How to fix it |
|---|
| Remove the object that is not in contact with the cooling machine. |
| Remove the object from the fan area. |
| Connect the power cord into the socket. |
| Turn on the power switch and set the thermostat to the desired value. |
| Remove anything from the vent holes. |
| Remove the coarse dirt and wipe off the dust. |
| Pull out the tube, check for any sharp edges, and if there are, cut with knife. |
| Pull out the tube and shorten 2cm. |

If you are experiencing excessive foaming when using gas make sure pressure is set to 35 to 40psi for all beverages.